



4359

Cutlery tray with insert 22 x 34 x 6cm



0311

Cutlery tray 29 x 18 x 4cm



4360

Cutlery tray with insert 30 x 40 x 61cm



1940

Cutlery tray 32 x 23 x 4cm



2105

Cutlery tray 32 x 24 x 4cm



3302

Cutlery tray 32 x 25.5 x 4.5cm



1444

Dish drainer 40.5 x 34.5 x 3cm



0233

Dish drainer 44 x 9 x 5cm



3901

Dish drainer w. tray 48 x 38 x 13cm



4304 (50-292)

Cutlery drainer 16.5 x 13.5 x 17cm



4305 (01-120)

Sink tidy 17.5 x 17.5 x 6cm



4306 (02-120)

Sink tidy 17.5 x 17.5 x 7.5cm



2336

Sink tidy 17.5 x 17.5 x 7.5cm



3736

Sink tidy 22 x 17 x 5cm



3311

Sink tidy 22.5 x 17 x 5cm



3927

Sink tidy 23 x 17 x 7.5cm



2337

Lettuce dryer Ø 21 x 7.5cm



3926

Colander Ø 30 x 11cm



3285

Colander 18 x 3cm




3649

Colander 25 x 11cm



2142

Strainer Ø 17 x 6cm

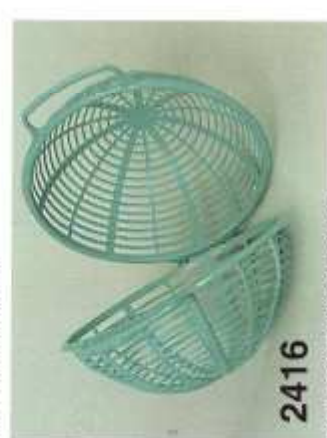

2416

Lettuce dryer Ø 22 x 18cm