



1857

Sandwich box 15 x 10 x 7cm



0120

2 egg holder 16 x 12.5 x 4 cm



2954

Egg holder 24 x 10.5 x 3.5cm



2335

Egg holder 31 x 13 x 4.5cm



2128

Holder for chocolate eggs 31 x 12.5 x 5cm



2048

Egg holder 48 x 10 x 6cm



3400

Cup Ø 9 x 4.5cm



3787

Measuring cup 12.5 x 8 x 9 cm



2999

Bottle Ø 5.7 x 16.5cm



0060

Sweet box Ø 3.5 x 1.5cm



0128

Sweet box 7 x 7 x 5 cm



2108

Sweet dispenser 27 x 30 x 18 cm



2190

Salt box, clock shape 11 x 7.5 x 2cm



2904

Beer drip tray 47 x 27 x 22cm



3820

Ball shaped box w. lid Ø 6.5cm



2315

Dish 16 x 14.5 x 4.5cm




3747

Pudding mould Ø 11 x 3.5cm



3305

Salad shaker 27.5 x 28 x 14.5cm

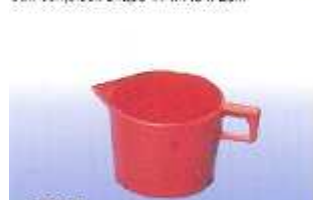

1804

Jug Ø 8 x 11.5cm



1716

Oval jug 15 x 10 x 7cm



2482

Jug Ø 15.5 x 28cm



1956

Zodiac dish Ø 31 x 3cm



0296

Candle holder 5.5 x 9.7cm



2387

Candle holder Ø 7.5 x 5.5cm



2513

Rose holder Ø10 x 12.5cm



3151

Decorated goblet Ø 9 x 5.5 cm



3107

Box brush (00-316) 14 x 7 x 3cm



1323

Pail w. handle and spout 24 x 20 x 15.5cm